



CB STANDARD CONFIGURATION

CB INVERTED CONFIGURATION

BURNER MODEL	A	C STD	C MAX	D STD*	D FIRE*	E	G	H	I	J	K	L	M	N	P	Q	R	S	T	U	W	X	Y	Z
SIZE-1	32 3/4	4	5	8 1/4	7 1/2	6 1/2	7 3/8	12 7/8	11 1/4	6 1/2	14 3/8	9 3/4	13	11 3/8	11 3/4	7 1/4	18 1/4	11 1/4	7 1/8	16 3/4	18 1/4	4	9	7 1/2
SIZE-2	37 1/4	4	5	10	9 3/4	7 1/8	7 3/8	15	13 1/4	7 1/2	15 1/8	10 1/4	12 1/2	12	14 1/2	9	18 1/4	11 3/4	8	22	21 1/8	5 1/4	9	7 1/2
SIZE-3	44 1/4	4	5	11 1/2	10 3/4	8	7 3/8	16 3/4	15 1/4	8 3/8	17 3/8	12 1/8	12 1/2	14 1/2	18 5/8	10 1/4	19 3/4	15 1/4	8 3/8	26 1/2	25 3/8	7 7/8	9	7 1/2
SIZE-4	50 1/4	5	6	13 5/8	12 1/8	8 1/4	7 3/8	17 1/2	15 3/8	8 3/4	20 1/8	12 1/8	12 1/2	17	19 1/4	12 1/2	19 1/2	21 3/4	8 1/2	31 1/2	30 1/4	7 1/8	11	9 1/2

NOTES

- 1 - "D STD" COLUMN TO BE USED FOR (WATERTUBE, CAST IRON, FIREBOX) APPLICATIONS
- "D FIRE" COLUMN TO BE USED FOR (FIRETUBE) APPLICATIONS